



Straight Shoulder Immobilizer

Application Instructions


STEP 1 Secure immobilizer around chest area with cutout portion under arm to be immobilized.

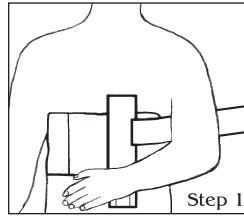

STEP 2 Place arm in humeral cuff and secure with hook and loop closure.

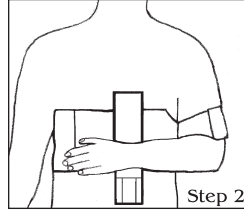

STEP 3 Place wrist in foam padded wrist cuff and secure with hook and loop closure. Slide hand through hand cuff to help avoid wrist drop.*

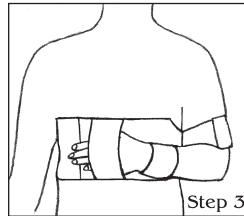

* Hand cuff is included on the straight immobilizer.

Contact your healthcare provider or therapist for further instruction.




Manufactured For:
Breg, Inc.
2885 Loker Ave. East
Carlsbad, CA 92010 U.S.A.
P: 800-321-0607
F: 800-329-2734
www.breg.com
AW-1.00302 Rev B 1012


Straight Shoulder Immobilizer

Application Instructions


STEP 1 Secure immobilizer around chest area with cutout portion under arm to be immobilized.

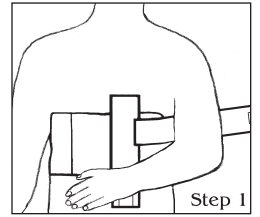

STEP 2 Place arm in humeral cuff and secure with hook and loop closure.

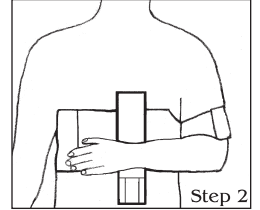

STEP 3 Place wrist in foam padded wrist cuff and secure with hook and loop closure. Slide hand through hand cuff to help avoid wrist drop.*

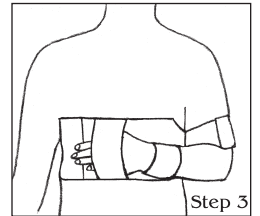

* Hand cuff is included on the straight immobilizer.

Contact your healthcare provider or therapist for further instruction.




Manufactured For:
Breg, Inc.
2885 Loker Ave. East
Carlsbad, CA 92010 U.S.A.
P: 800-321-0607
F: 800-329-2734
www.breg.com
AW-1.00302 Rev B 1012


Straight Shoulder Immobilizer

Application Instructions


STEP 1 Secure immobilizer around chest area with cutout portion under arm to be immobilized.

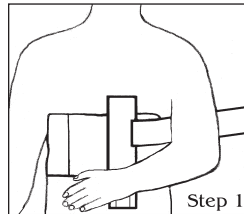

STEP 2 Place arm in humeral cuff and secure with hook and loop closure.

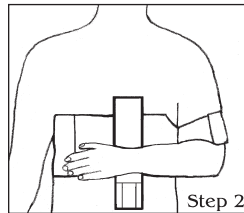

STEP 3 Place wrist in foam padded wrist cuff and secure with hook and loop closure. Slide hand through hand cuff to help avoid wrist drop.*

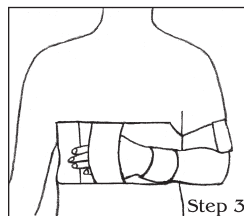

* Hand cuff is included on the straight immobilizer.

Contact your healthcare provider or therapist for further instruction.




Manufactured For:
Breg, Inc.
2885 Loker Ave. East
Carlsbad, CA 92010 U.S.A.
P: 800-321-0607
F: 800-329-2734
www.breg.com
AW-1.00302 Rev B 1012


Straight Shoulder Immobilizer

Application Instructions


STEP 1 Secure immobilizer around chest area with cutout portion under arm to be immobilized.

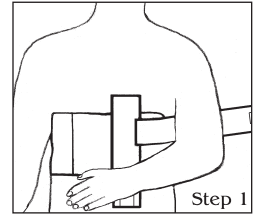

STEP 2 Place arm in humeral cuff and secure with hook and loop closure.

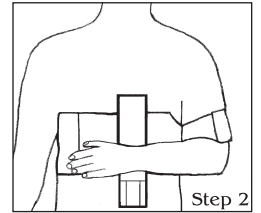

STEP 3 Place wrist in foam padded wrist cuff and secure with hook and loop closure. Slide hand through hand cuff to help avoid wrist drop.*

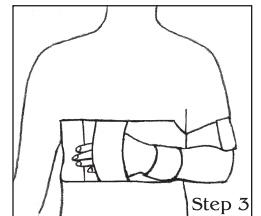

* Hand cuff is included on the straight immobilizer.

Contact your healthcare provider or therapist for further instruction.



Manufactured For:
Breg, Inc.
2885 Loker Ave. East
Carlsbad, CA 92010 U.S.A.
P: 800-321-0607
F: 800-329-2734
www.breg.com
AW-1.00302 Rev B 1012